



# Installation Instructions for Model FHP-XXX Hose Protector Bands



1. With the hose in a relaxed state, remove the adhesive covering on the back of the hose protector then wrap the protector band around the hose and clamp it in place as tightly as possible using the locking grip pliers.

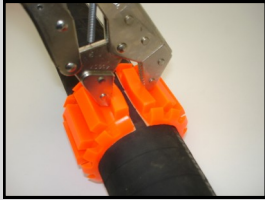


2. Wrap each cable tie around each grooved end of the hose protector. Each tie must be all the way down in the grooves and completely around the protector with each locking clamp in the space between the ends of the hose protector.

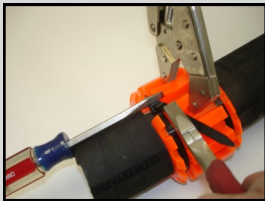

3. Use the pliers and flat blade screwdriver to pull each cable tie as tight as possible

4. Trim the excess of the cable tie with the shears or diagonal cutter.

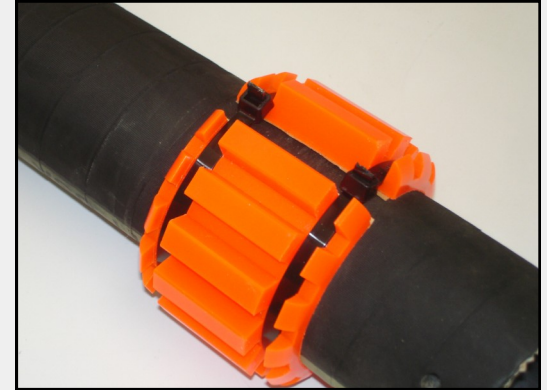

Tools needed:

large locking grip pliers (vice grips)  
flat bladed screwdriver  
sheet metal shears or diagonal  
cutter (dikes)